



WIRE
LESS
CON
TROL
LER

WIRELESS CONTROLLER

FOR PS4™

INSTRUCTION MANUAL



BEFORE USE

Thank you for purchasing our controller.

Please read this user manual carefully before using the product and keep it for future reference.




DESCRIPTION

The PS4™ compatible controller boasts a unique and original design. Its ergonomic shape allows a comfortable and prolonged use. The concave analog sticks and curved triggers guarantee high precision and a perfect grip. The tactical panel can be clicked.


- > Type-C charging cable included
- > Also for PC, PS3™ and PS5™ with supported PS4™ games
- > Audio connection with 3,5 mm jack
- > Vibration
- > Turbo function
- > No motion sensors



INSTALLATION ON PS4™

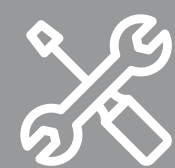

- > Turn your PS4™ System on.
- > When using the controller for the first time, connect it to the console plugging it into one of the USB ports with the included Type-C cable.
- > Once connected, unplug the cable, then press and hold the HOME button for 1 second: the light bar will start flashing slowly.
- > When the light bar remains steady, the controller is ready for use.

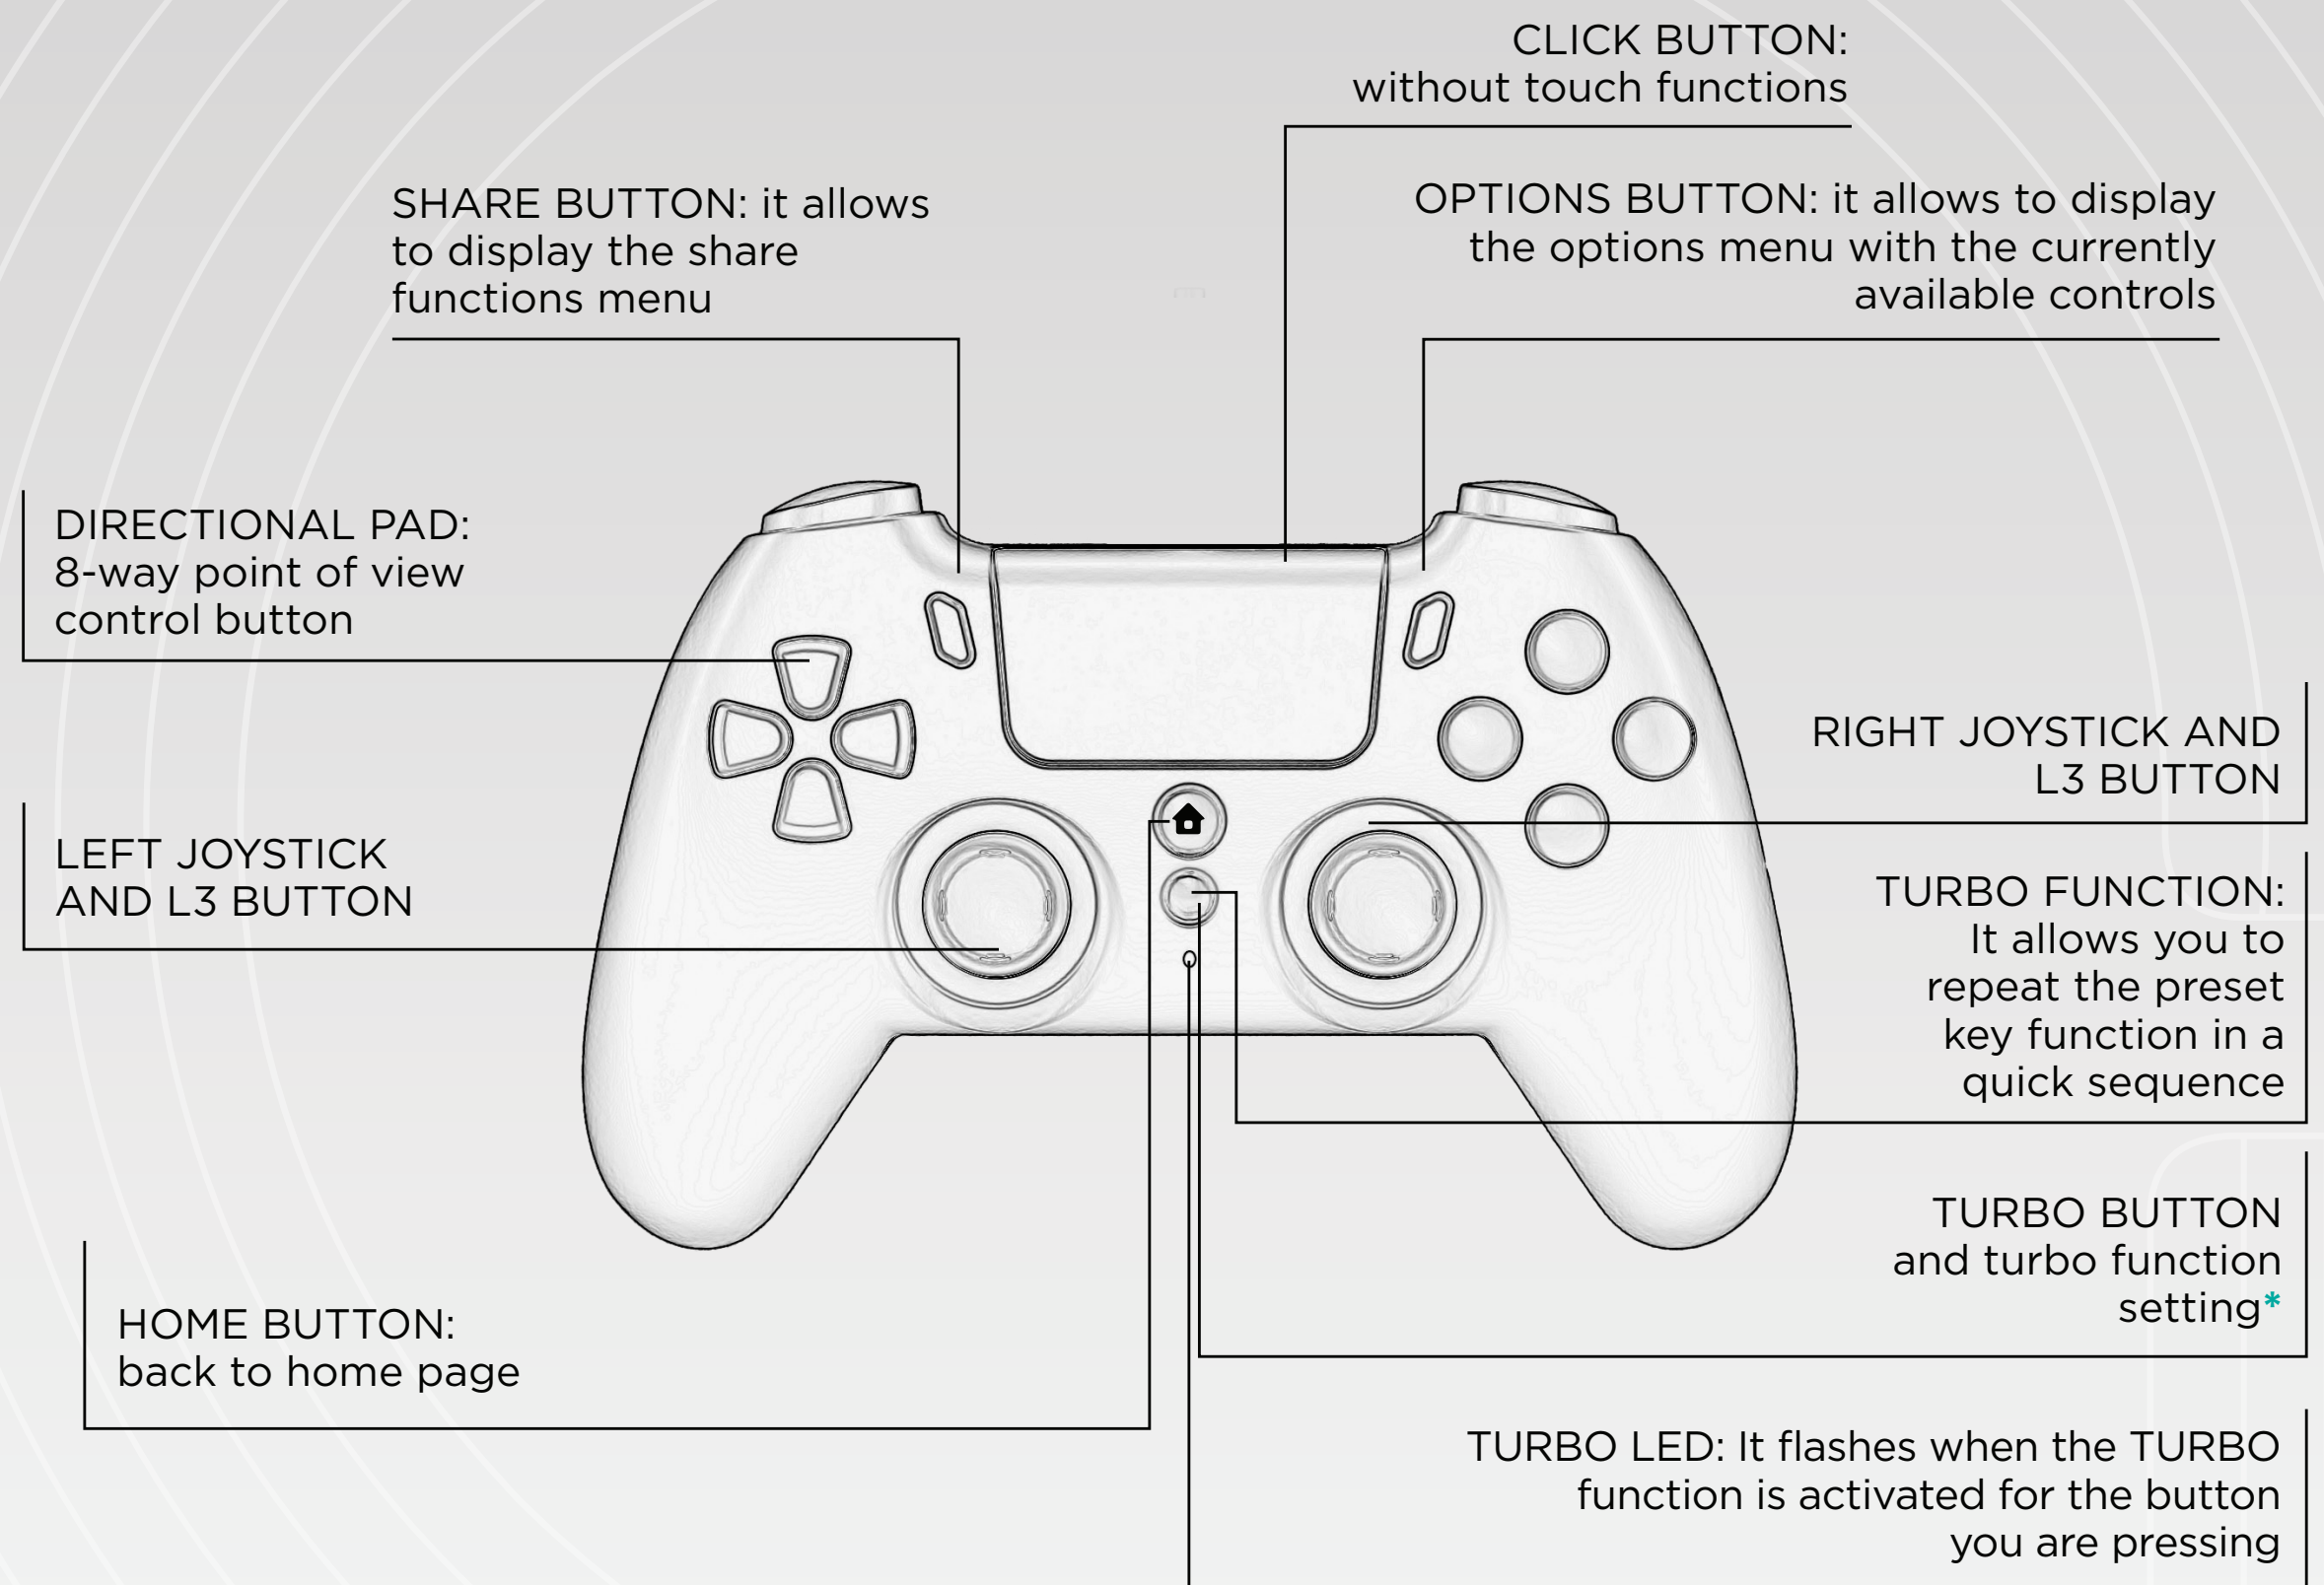

- *1. Press and hold any button you want to set with turbo function, then press turbo button once.
- *2. Press and hold the button you set with turbo function, then press turbo button to remove setting.
- *3. Turbo mode can be set on buttons cross, square, triangle, circle, L1, L2, R1, R2.





R1 BUTTON

R2 BUTTON

LIGHT BAR:

Light is on

- > When the controller is connected to the console
- > In stand-by mode

The light is in breathing mode

- > When charging the controller while playing
- > When charging the controller in stand-by mode

The light is fast flashing


- > When the battery is running low

The light is off

- > When the controller is not connected to the console
- > When the controller is fully charged
- > When the controller fails to connect to PS4™ after 30 seconds of search mode

L1 BUTTON

L2 BUTTON

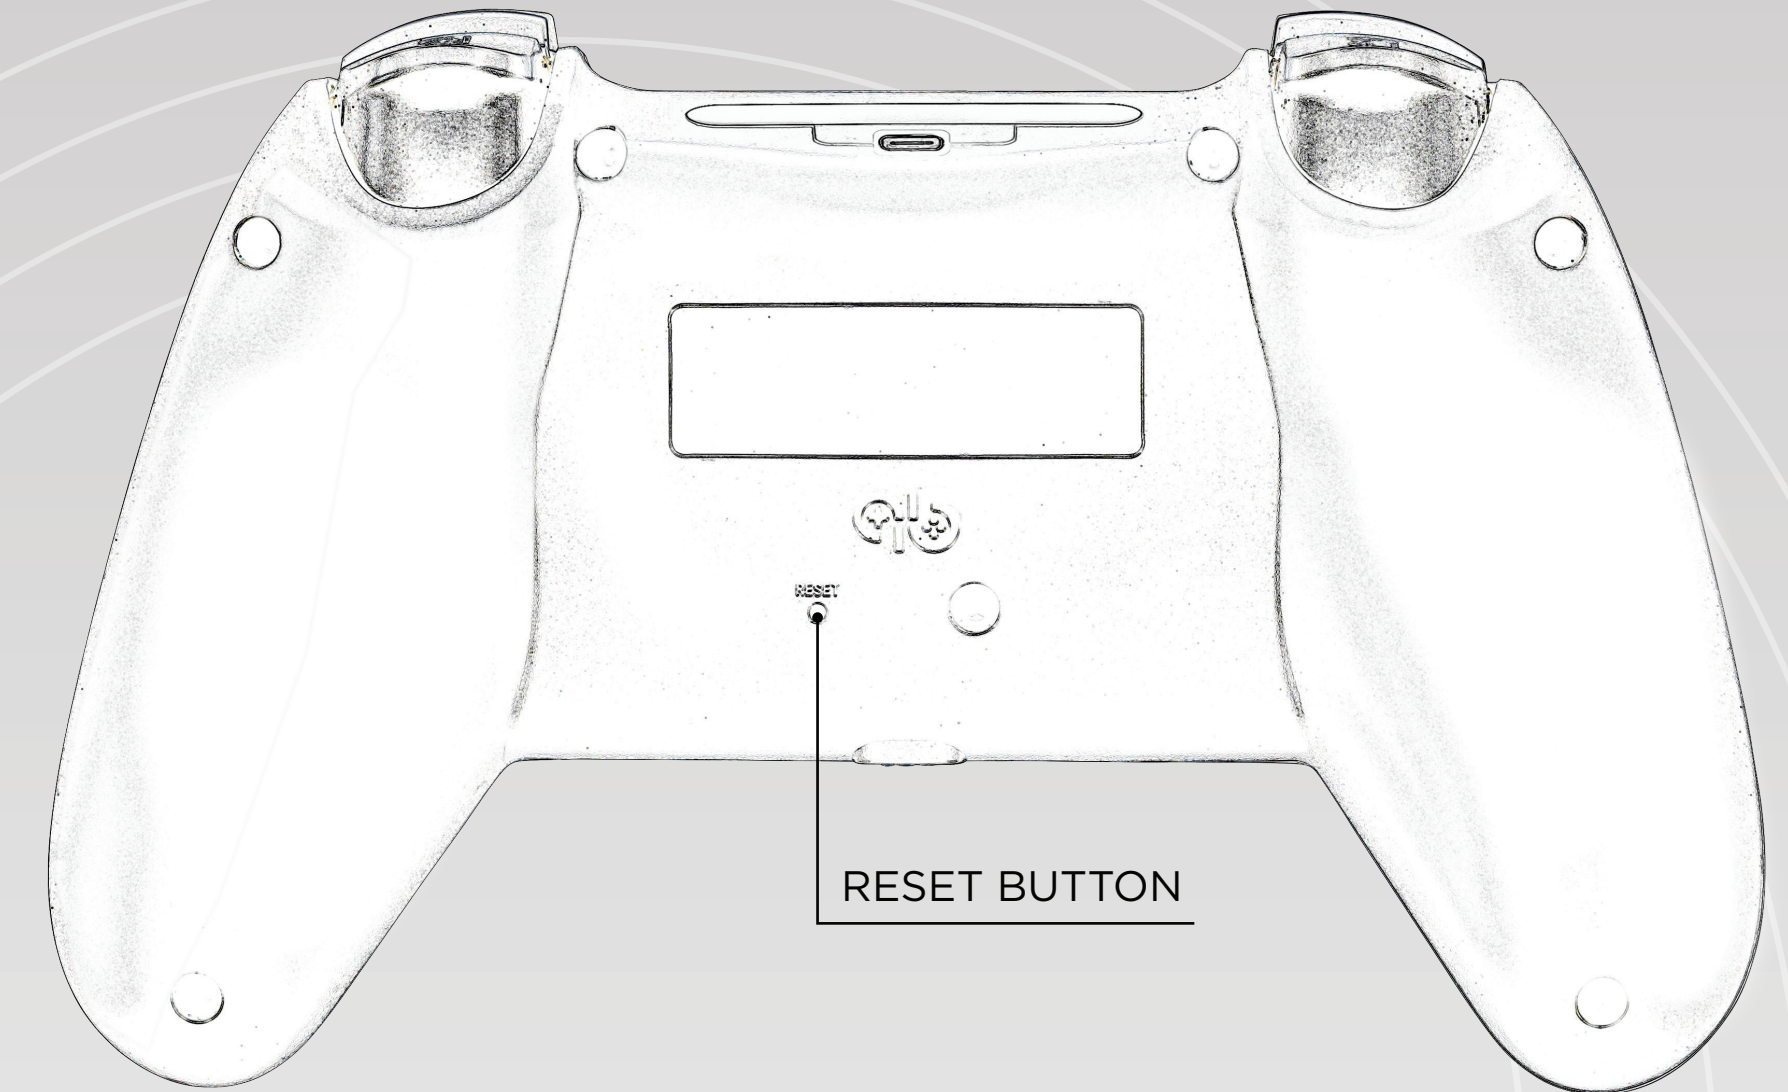

JACK 3.5 MM:

- > 3.5 mm headset compatible
- > For game audio and voice chat

> L2 and R2 buttons can be used for analogue signals during progressive actions in-game.

> RESET button on the back.

> The front clickable panel has no touch functions.



WIREF

LESSO

CO

02



INSTALLATION ON PC

Press and hold HOME and SHARE button for 3 seconds, then enter the PC's bluetooth device searching page, click search bluetooth device. When the white led remains steady, the controller is ready.



IMPORTANT

Correspondence of Standard PS4 and PC buttons (See Chart).

With PS4™	With PC
Triangle	4
Circle	3
Cross	2
Square	1



ATTENTION

In case the controller does not work properly, please check if the updated firmware is due.

File download -> [firmware.exe](#) at www.qubick.it/aggiornamento.





WARNING FOR USE

- > Do not use this product for purposes other than those described in this document.
- > The controller should not be soaked in water, wet or placed close to liquids.
Store the controller in a dry place.
- > Never attempt to disassemble or rebuild the product yourself.
Do not insert any objects into the product.
- > Do not apply excessive pressure and do not subject the device to violent impacts.
- > Keep the product away from direct sunlight, excessive heat or extreme cold.
Exposure to very high temperatures can damage the structure and internal circuits of the device.
- > Keep out of reach of children.
- > Please stop using the product immediately if you experience fatigue, pain in your hands or arms during use. Take regular breaks during play.



RESPECT FOR THE ENVIRONMENT

Electrical and/or electronic devices must not be disposed of as urban waste but must be deposited at the appropriate collection centres.

Information on the correct handling of Waste Electrical and Electronic Equipment (WEEE) from households in accordance with European Directive 2012/19/EU.

The crossed-out wheeled bin symbol on the equipment or its packaging indicates that the product at the end of its useful life must be collected separately from other waste in order to allow for proper treatment and recycling. The user shall, therefore, deliver the end-of-life equipment free of charge to the points available for the separate collection of electrical and electronic waste - WEEE - or return it to the retailer in accordance with the procedures laid down.

The proper separate collection of discarded equipment allows for an environmentally compatible waste management, thus helping to avoid possible dispersions of hazardous substances, negative effects on the environment and health, favouring the reuse and/or recycling of the materials of which the equipment is composed. Unauthorised disposal of the product by the user will result in the application of the sanctions provided for by current legislation. Please check the current legislation and the measures taken by the public service operating in your country or territory.”

Cidiverte SpA has chosen to join ERION, a primary Collective System that guarantees consumers the correct treatment and recovery of WEEE and the promotion of policies oriented towards environmental protection.



Designed, imported and distributed
by Cidiverte SpA
Piazza Giovine Italia, 3 - 20123 Milano
www.cidiverte.it